# Elevate V64



# Welcome to Elevate

# WHAT'S IN THE BOX?


#### **Elevate V64**

- A. Phone
- B. Ethernet Cable F. Power Adapter


E.

Stand

- C. Handset Cable
- D. Handset

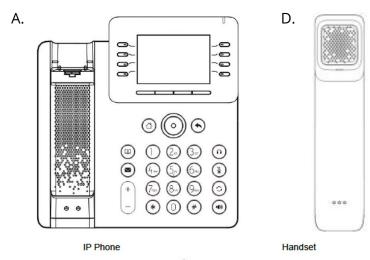

 C. E. Handset Cord Stand



F.


Power Adapter(Optional)

Quick Start Guide - Elevate V64

# **GUIDED SETUP**

# **Assembling Your Phone**

Slot the plinth into the back of the phone, as shown below.

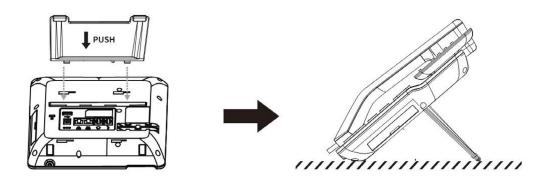


# **Connect Handset and Optional Headset**

Note: Your phone supports headsets using a RJ9 or USB cable. For connection directions, refer to your headset documentation.

#### **Connect Cables**

Please follow the diagram below for information on your device's connection options.

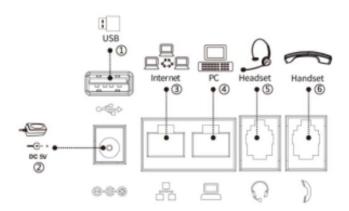

NO.	Item	Function
1	USB-A Port	Connect a USB-A compatible headset or Flash Drive for local call recording.
2	DC-5V Port	Connect the power adapter
3	Network Port	Connecting to LAN/Internet via Ethernet. Power over Ethernet capable.
4	PC Port	Pass through the network connection to a PC/MAC
5	Headset Port	Connect any RJ-9 Capable Headset
6	Handset Port	Connect the V64 Handset

Once plugged into power & establishing a network connection, the phone will automatically download its configuration files & become usable. The voicemail box will be functional with a default greeting.

Quick Start Guide - Elevate V64

#### **Establishing a Wi-Fi Connection**

- 1. Press the "Menu" soft key
- 2. Use the navigation arrow keys and "OK" keys to reach the "Basic" menu option
- 3. Scroll down to "WLAN" option using the navigation keys and press OK
- 4. Toggle "WLAN" to Enabled using the right navigation key
- 5. Scroll down to the "Available Networks" option using the navigation keys and press "OK"
- 6. Press the "Scan" soft key to scan for available 2.4Ghz/5Ghz networks.
- 7. Select the desired Wi-Fi network using the navigation and "OK" keys and follow the prompts to enter any required password.

# **VOICEMAIL BOX SETUP**

#### **Recording Your Personal Voicemail Greeting**

- 1. Press the "Messages" 

  button.
- 2. Enter the PIN provided to you by your Administrator, followed by the # key.
- 3. Select option 3 for personal options.
- 4. Select option 1 to record your voicemail greeting.
- 5. Follow the voice prompts to record and check your greeting.

#### **Changing Your PIN From the Phone**

- 1. Press the "Messages" button.
- 2. Enter the PIN provided to you by your Administrator, followed by the # key.
- 3. Select option 3 for personal options.
- 4. Select option 2 to change your PIN.
- 5. Enter the new PIN when prompted. Press # when done.

Quick Start Guide - Elevate V64

#### COMMONLY USED FEATURES

#### **Placing Outgoing Calls**

When the phone is not in use:

1. Pick up the handset or press the "Speakerphone" (🕬



2. Dial tone will be heard.

#### When using a headset:

- 1. Press the "Headset" ① button to activate headset mode.
- 2. Dial an extension or telephone number.

#### When you are already on a call:

- 1. Press the "Hold" soft key.
- 2. Press the "More" soft key.
- 3. Press the "New Call" soft key.
- 4. Dial an extension or telephone number.
- 5. Resume the original call by pressing the "Resume" soft key.

#### **Answering an Incoming Call**

#### On the handset:

• Pick up the handset to answer the call.

#### On a headset:

 When the headset is connected, press the "Headset" button to answer the call.

#### On Speakerphone:

Press the "Speaker" button to answer the call.

#### **Rejecting an Incoming Call**

Press the "Reject" soft key to immediately send the caller to voicemail.

#### **Ending a Call**

#### On a handset

Hang up the handset or press the "EndCall" soft key.

#### On a headset:

• Press the "Headset" button OR press the "End Call" soft key.

#### On speakerphone:

• Press the "Speakerphone" button OR press the "End Call" soft key.

#### Hold

Placing a call on hold:

• While on a call, press the "Hold" soft key.

#### Retrieving calls on hold:

Press the "Resume" soft key.

#### Mute

- 1. To mute the microphone on a call, press the "Mute" 🔌 button.
- 2. To un-mute the microphone, press the "Mute" button again.

### **Transferring Calls**

Cold Transfer

- 1. Press the Xfer soft key during an active call.
- 2. Enter the number you want to transfer to.
- 3. Press the Xfer soft key

#### Warm Transfer

- 1. Press the Xfer soft key during an active call.
- 2. Enter the number you want to transfer to, and press the Dial soft key.
- 3. Press the Xfer soft key when the second party answers.

#### **Call Waiting**

While already on a call, and a new call rings in, you will hear a beep tone emitted by your phone.

#### To Answer the Second Call:

- 1. Press the "Answer" soft key to access that call. The first call will be placed on hold.
- 2. Once the second call has ended, resume the original call by pressing the "Resume" soft key.

#### To Reject the Second Call:

• Press the "Reject" soft key to immediately send the caller to voicemail.

#### **Volume Adjustment**

#### In-Call Volume:

• While on a call, press the "+" and "-" buttons to raise or lower the volume.

#### Ringer Volume:

• While the phone is not in use, press the "+" or "-" buttons to adjust the ringer volume on the phone.

#### **Speakerphone**

While the phone is not in use:

• Press the "Speakerphone" button to activate the speakerphone and get dial tone for an outbound call.

While on a call on the handset or headset:

• Press the "Speakerphone" button to continue the current call on the speakerphone.

While a call on speakerphone is active:

• Press the "Speakerphone" button to hang up the current call.

#### **Forwarding Calls**

- 1. Press the "Menu" soft key.
- 2. Press the right arrow key to highlight "Features" and press the "Ok" button.
- 3. Press the "Ok" button while highlighting "Call Forward".
- 4. Press the "Ok" button or the "Enter" soft key.
- 5. Select the forwarding option you'd like to manipulate, and press the "Ok" button.
  - a. For example, to default calls to always forward select "Unconditional"
- 6. Utilize the arrow keys to select options (up & down) and toggle options off and on (left & right).
- 7. After your changes have been made, select the "OK" button to save changes.

#### Redial

- Press ② when the phone is idle to dial out the last dialed number.
- Press the "CallLog" soft key to visit the list of recent calls to select a different previous call.



#### We are here to help

Online: <a href="https://support.serverdata.net/app/main">https://support.serverdata.net/app/main</a>